

- | | |
|-----------------|----------------------|
| Cat1 | R1 Fa0/0 |
| Fa0/1 | R2 Fa1/0 |
| Fa0/2 | R4 Fa0/0 |
| Fa0/4 | R5 Fa0/0 |
| Fa0/5 | BB1 |
| Fa0/11 | Cat4 Fa0/19 & Fa0/20 |
| Fa0/19 & Fa0/20 | Cat3 Fa0/21 & Fa0/22 |
| Fa0/21 & Fa0/22 | Cat2 Fa0/23 & Fa0/24 |
| Fa0/23 & Fa0/24 | Cat2 Gi0/1 |
| Gi0/1 | R2 Gi0/0 |
| Gi0/2 | |
| Cat2 | R1 Fa0/1 |
| Fa0/1 | R6 Fa0/0 |
| Fa0/6 | R7 Fa0/0 |
| Fa0/7 | R8 Fa0/0 |
| Fa0/8 | R9 Fa0/0 |
| Fa0/9 | BB2 |
| Fa0/12 | BB3 |
| Fa0/13 | BB3 |
| Fa0/19 & Fa0/20 | Cat3 Fa0/19 & Fa0/20 |
| Fa0/21 & Fa0/22 | Cat4 Fa0/21 & Fa0/22 |
| Fa0/23 & Fa0/24 | Cat1 Fa0/23 & Fa0/24 |
| Gi0/1 | Cat1 Gi0/1 |
| Cat3 | R2 Fa1/1 |
| Fa0/2 | R4 Fa0/1 |
| Fa0/4 | R5 Fa0/1 |
| Fa0/5 | ASA-1 Fa0/0 |
| Fa0/10 | ASA-1 Fa0/1 |
| Fa0/11 | ASA-1 Fa0/2 |
| Fa0/12 | ASA-1 Fa0/3 |
| Fa0/13 | ACS-Server |
| Fa0/14 | Test-Workstation |
| Fa0/15 | Cat2 Fa0/19 & Fa0/20 |
| Fa0/19 & Fa0/20 | Cat2 Fa0/19 & Fa0/20 |
| Fa0/21 & Fa0/22 | Cat1 Fa0/21 & Fa0/22 |
| Fa0/23 & Fa0/24 | Cat4 Fa0/23 & Fa0/24 |
| Cat4 | R6 Fa0/1 |
| Fa0/6 | R7 Fa0/1 |
| Fa0/7 | R8 Fa0/1 |
| Fa0/8 | R9 Fa0/1 |
| Fa0/9 | ASA-2 Fa0/0 |
| Fa0/10 | ASA-2 Fa0/1 |
| Fa0/11 | ASA-2 Fa0/2 |
| Fa0/12 | ASA-2 Fa0/3 |
| Fa0/13 | IPS-Mngmnt |
| Fa0/14 | IPS-Gi0/0 |
| Fa0/15 | IPS-Gi0/1 |
| Fa0/16 | IPS-Gi0/2 |
| Fa0/17 | IPS-Gi0/3 |
| Fa0/18 | IPS-Gi0/3 |
| Fa0/19 & Fa0/20 | Cat1 Fa0/19 & Fa0/20 |
| Fa0/21 & Fa0/22 | Cat2 Fa0/21 & Fa0/22 |
| Fa0/23 & Fa0/24 | Cat3 Fa0/23 & Fa0/24 |

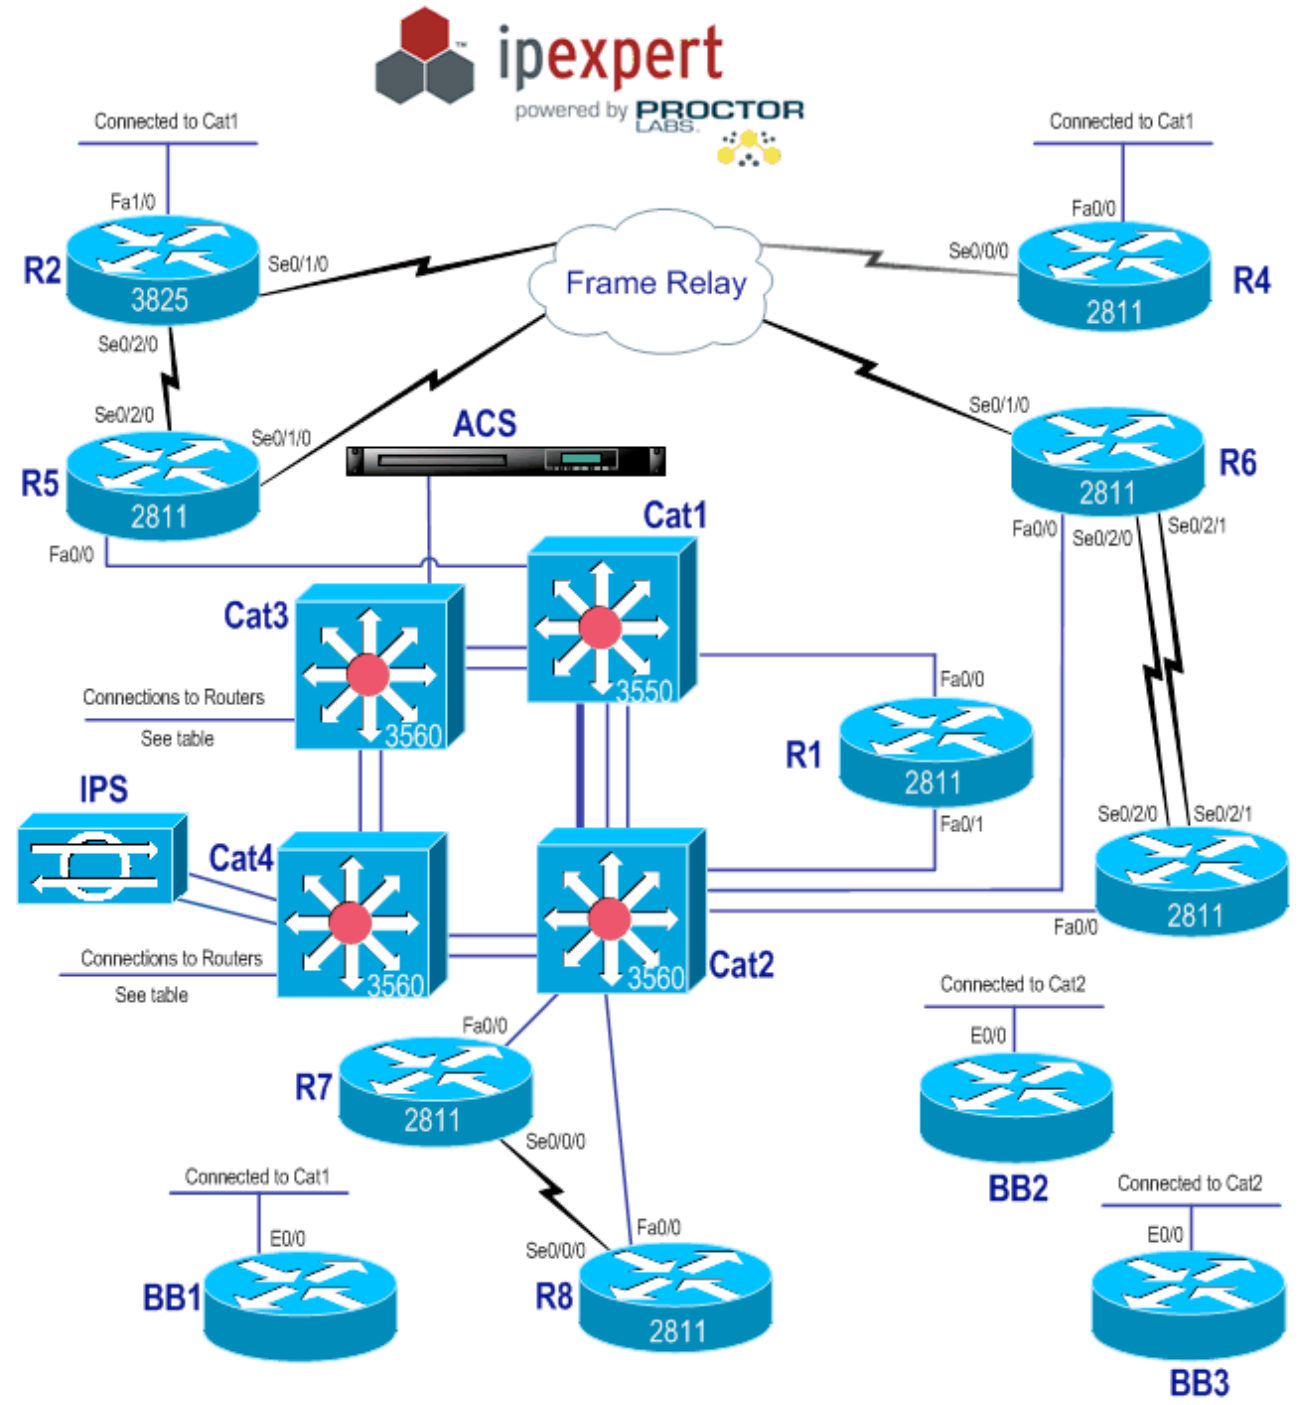


Diagram A – Base Connectivity BLS v3